

Town of Bristol Fire Department Standard Operating Procedure

Stored-Pressure Water Extinguisher

July 31, 2022

Table of Contents

SOP:	Title:
1-01	Filling Stored-Pressure Water Extinguisher at Statio
1-02	Filling Store Pressure Water Extinguisher off Engine

Town of Bristol Fire Department Standard Operating Procedures						
		REVISION				
SECTION	Filling Stored-Pressure Water	7-31-2022				
1-01	Extinguisher at Station	NEXT REVISION DATE				
		7-31-2023				

Purpose: To outline proper filling technique of department store-pressure water extinguisher.

Scope: All stored-pressure water extinguishers owned by Bristol Fire Department.

Responsibility: It is the responsibility all fire fighters to ensure stored-pressure water extinguishers are in proper working order.

Policy: All stored-pressure water extinguishers will be filled after each use.

Procedure:

- 1) De-Pressurize the extinguisher by discharging water until there is no pressure.
- 2) Remove the valve body assembly by loosening the collar just under the handle
- 3) Remove the plastic cone from inside the extinguisher body
- 4) Fill with water to roughly where the bottom of the plastic cone was
- 5) Insert plastic fill cone back into extinguisher, if water is in the cone then remove water.
- 6) Re-install the valve body assembly, making the collar hand tight. When tight the gauge should align with the label on the extinguisher body
- 7) Fill with air using standard air chuck and air hose at station. Place chuck on Schrader valve and charge to 100 PSI
- 8) Verify gauge needle on extinguisher is in the green
- 9) Return pin to handle

Town of Bristol Fire Department Standard Operating Procedures							
SECTION 1-02	Filling Stored-Pressure Water Extinguisher off Engine	REVISION 7-31-2022 NEXT REVISION DATE 7-31-2023					

Purpose: To outline proper filling technique of department store-pressure water extinguisher.

Scope: All stored-pressure water extinguishers owned by Bristol Fire Department.

Responsibility: It is the responsibility all fire fighters to ensure stored-pressure water extinguishers are in proper working order.

Policy: All stored-pressure water extinguishers will be filled after each use.

Procedure:

- 1) De-Pressurize the extinguisher by discharging water until there is no pressure.
- 2) Remove the valve body assembly by loosening the collar just under the handle
- 3) Remove the plastic cone from inside the extinguisher body
- 4) Fill with water to roughly where the bottom of the plastic cone was
- 5) Insert plastic fill cone back into extinguisher, if water is in the cone then remove water from the extinguisher.
- 6) Re-install the valve body assembly, making the collar hand tight. When tight the gauge should align with the label on the extinguisher body
- 7) Retrieve the air hose from the air box on engine and attach it to air discharge on pump panel
- 8) Fill with air using standard air chuck and air hose from pump panel. Place chuck on Schrader valve and charge to 100 PSI.
- 9) Verify gauge needle on extinguisher is in the green
- 10) Return pin to handle